



# AlAleem LED Clock Setup Instructions

Please install the Android App from the play store named **AlAleem Smart Prayer Times LED Display Setup** or from the link <https://play.google.com/store/apps/details?id=com.alaleem>, and follow the below instructions to connect the App to the LED Display and set Prayer Times & other settings.

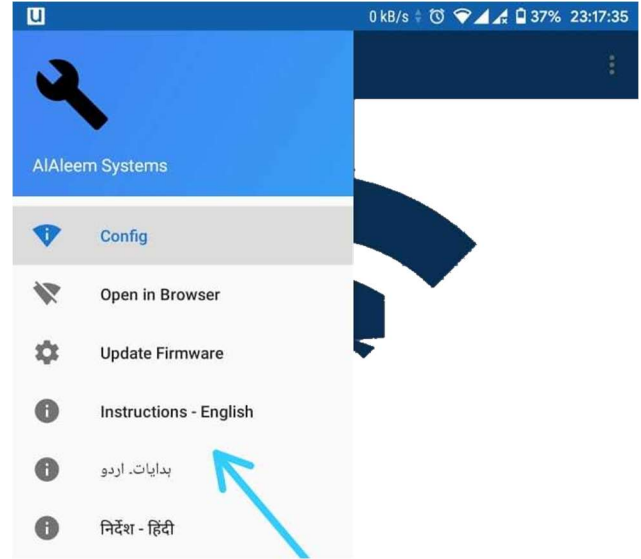

Scan QR Code to install App →

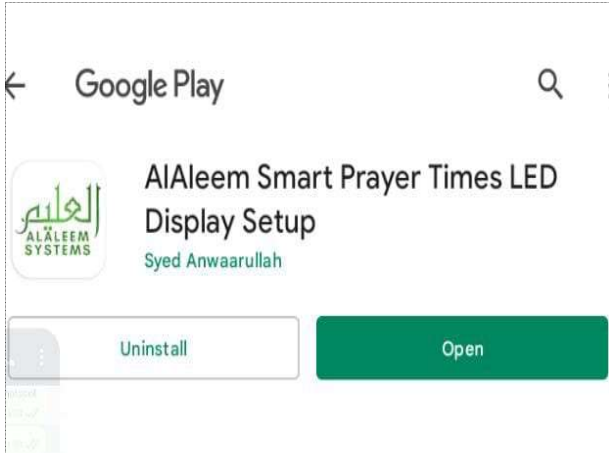

Complete Instruction Manual available in App

## Connect to LED Device's WiFi and update Settings from App

The following videos explain this process (Scan QR on right to directly open)

English - <https://www.youtube.com/watch?v=jUBmYkadPeQ>

Hindi - <https://www.youtube.com/watch?v=APnHPwzNGEE>



English



Hindi/Urdu

*The steps shown in above videos are also explained below:*

### One Time Setup – Connect to the LED Device's WiFi

Each LED Display has its own inbuilt WiFi Hotspot with a unique password, which is provided on purchase and is also available on the Device. You first need to connect your Phone/Tablet/PC to this Display's WiFi before continuing in the App. Please follow the one-time setup below to connect. This setup is only required for your first connection or when there's a Firmware update:

- Turn Off Data Connection (2G/3G/4G/5G) of Phone
- Open WiFi of Phone and scan for Networks. Connect to the LED Device's WiFi Hotspot / Access Point (usually of the type **AlAleem.com-M1-XXXXXXXXXXXX**) and enter the WiFi password. If any prompt comes to **Keep WiFi Connection, no Internet found**, select Yes. Don't select the Disconnect option.
- Once connected, open the installed **AlAleem App**.
- You'll see the **Display Configuration** page load.
- Change values accordingly and scroll down to press the **Save** Button.
- Once done, simply close the App and disconnect from the Display's WiFi.

## Updating Fixed Jamath/Prayer Times:

The first few fields allow us to set the fixed Jamath/Iqamah/Namaz time in the Masjid. These are manually entered and changed whenever the Prayer Times change except for Maghreb time which is automatically changed based on the City Settings & Taqweem selection.

Enter all Jamath timings in this format **HOOR.MINUTE** without addition of any AM/PM or other special characters. Eg: **6.35** or **12.55** or **7.00** (or **7.0**)

For **Adjust\_Maghreb\_Mins**, enter the number of minutes you'd like to add to the Sunset Timing (updated daily) to indicate start of Maghreb Time. This is usually **5** in the Indian Subcontinent or **0**. Standard default is **5**.

**Maghreb Time** is automatically updated daily.

Settings/Field Name	Value
Fajr_Jamath	5.15
Zuhr_Jamath	1.30
Asr_Jamath	4.45
Adjust_Maghreb_Mins	5
Isha_Jamath	8.00
Juma_Jamath	2.00
Show_Start_End_Times	Y

For Ahle Hadith Masjids & others where the Maghreb Azan is given exactly at the start of the time, please set **Adjust\_Maghreb\_Mins** to **0**. The Maghreb time is automatically updated.

Settings/Field Name	Value
Adjust_Maghreb_Mins	0

---

**Note:** The City Settings for prayer calculation are pre-set when you receive the units from us. If you'd like to get City Settings for any other location than what you Ordered for, please Contact Us

---

## Adjusting Time & Date (if required)

In the **Set\_Time** field, enter time in the following format **HOURS.MINUTES.SECONDS** only. Do not add AM/PM etc.

Eg: **6.30.0** or **11.55.30** or **7.0.0**

In the **Set\_AM\_PM\_HH**, insert **A** or **AM** or **P** or **PM** or **HH** or **H**. Use HH to set time in 24 HR format in the **Set\_Time** field

Use **Set\_Date** to set Date in the Clock. Format: **DATE.MONTH.YEAR** (numeric only). Eg: **1.3.2020** (1st March, 2020)

Settings/Field Name	Value
Set_Time	1.45.00
Set_AM_PM_HH	P
Set_Date	1.3.2020
Set_Brightness	50

**Note:** **Set\_Brightness** is to change the LED Brightness. Can be from **1** to **100**. Usually, **50** is recommended.

For any further assistance, please Call/WhatsApp us on: [+91-817-917-3683](tel:+91-817-917-3683) or email [syed@alaleem.com](mailto:syed@alaleem.com)